Print on 8.5 x 11 (#122919)

Next

X-Ray View Box Installation

[153702 (-001 / -002)]

Parts Bag Contents

Screws 2

Special Tools

none

Intended Use

To provide a unit mounted station for viewing x-rays.

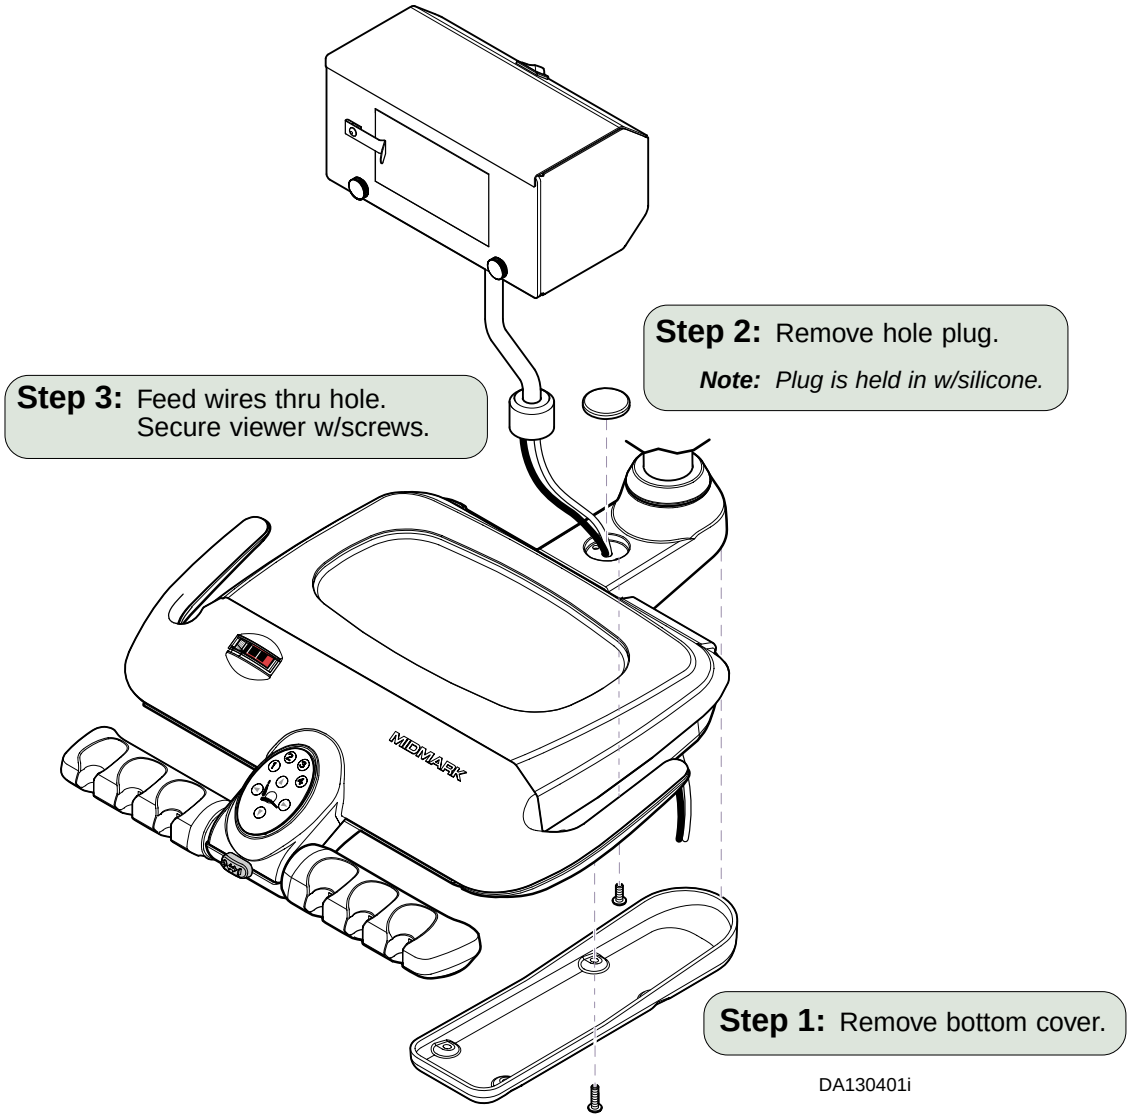

Step 2: Remove hole plug.

Note: *Plug is held in w/silicone.*

Step 3: Feed wires thru hole. Secure viewer w/screws.

Step 1: Remove bottom cover.

DA130401i

© Midmark Corporation 2003

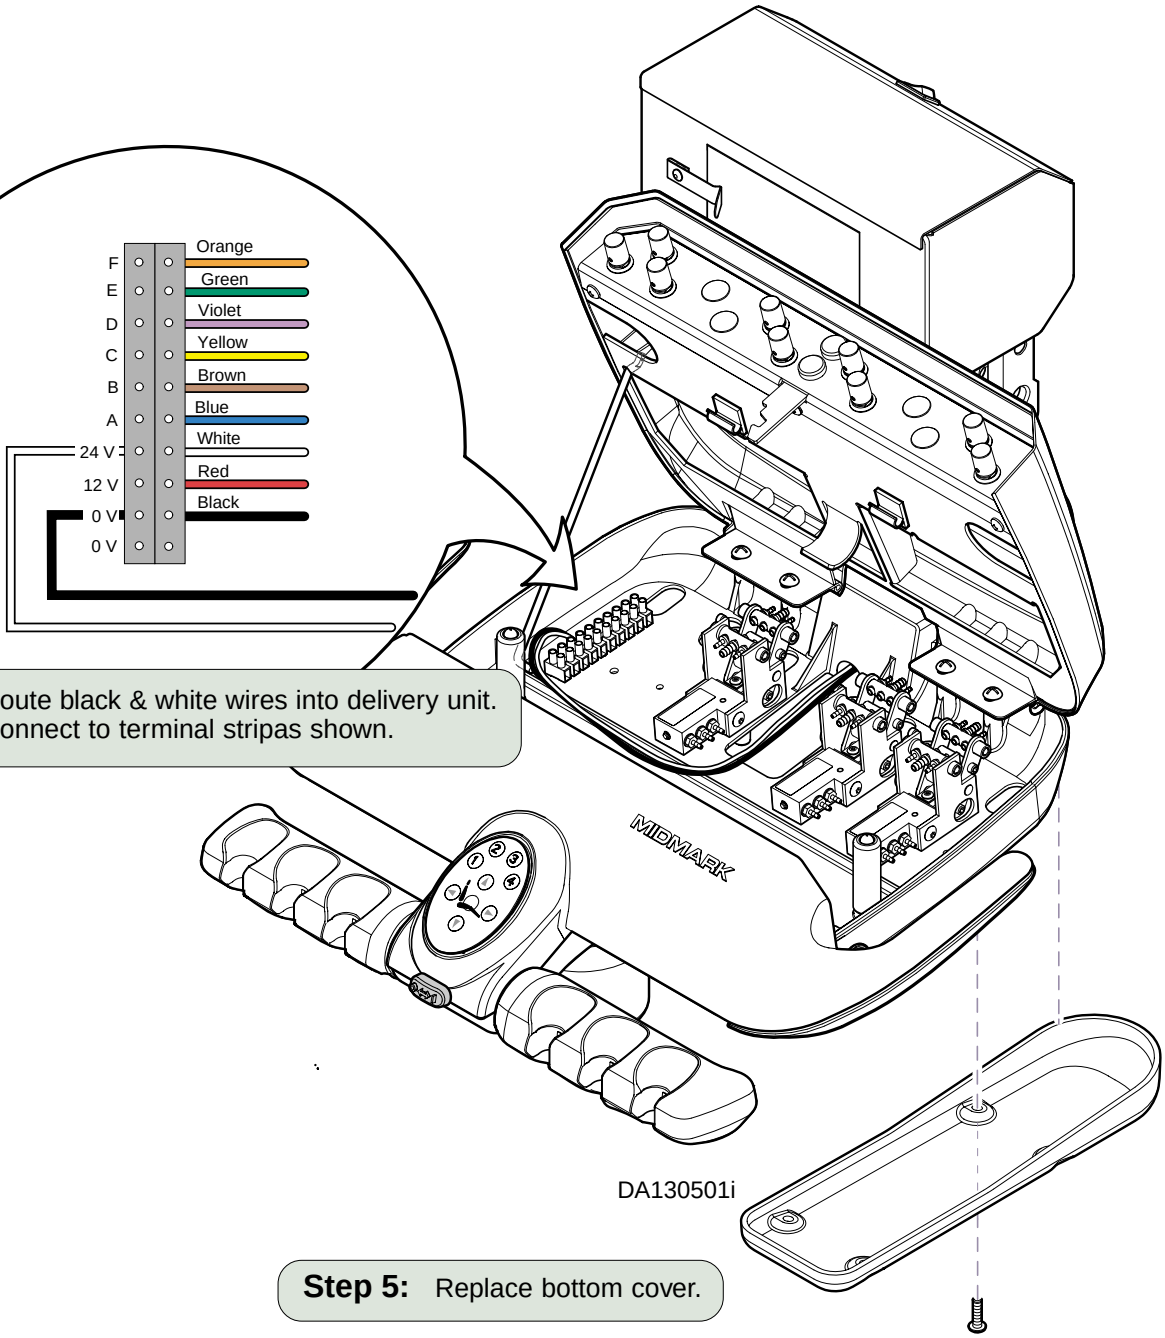

Step 4: Route black & white wires into delivery unit. Connect to terminal stripas shown.

DA130501i

Step 5: Replace bottom cover.

© Midmark Corporation 2003

Back

Step 7: Adjust tension nut until flex arm balances properly.

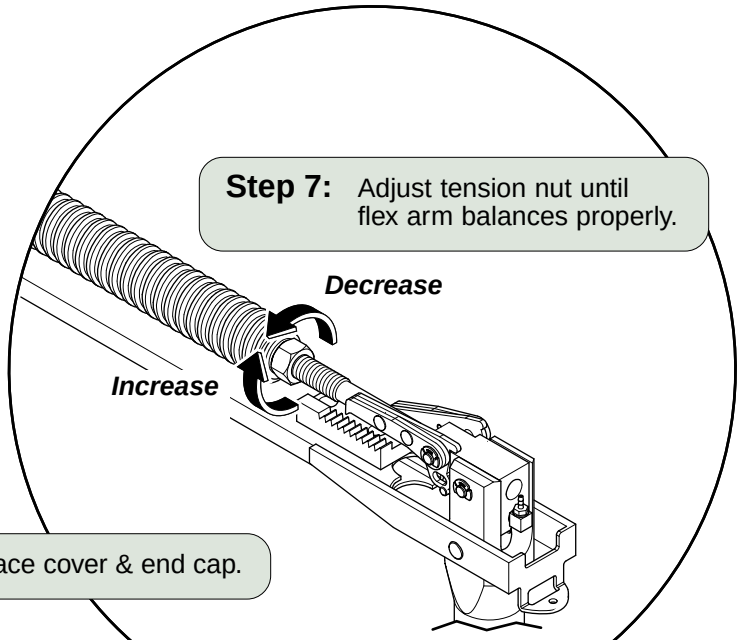

Step 6: Remove end cap.
Slide flex arm cover back.

Step 8: Replace cover & end cap.

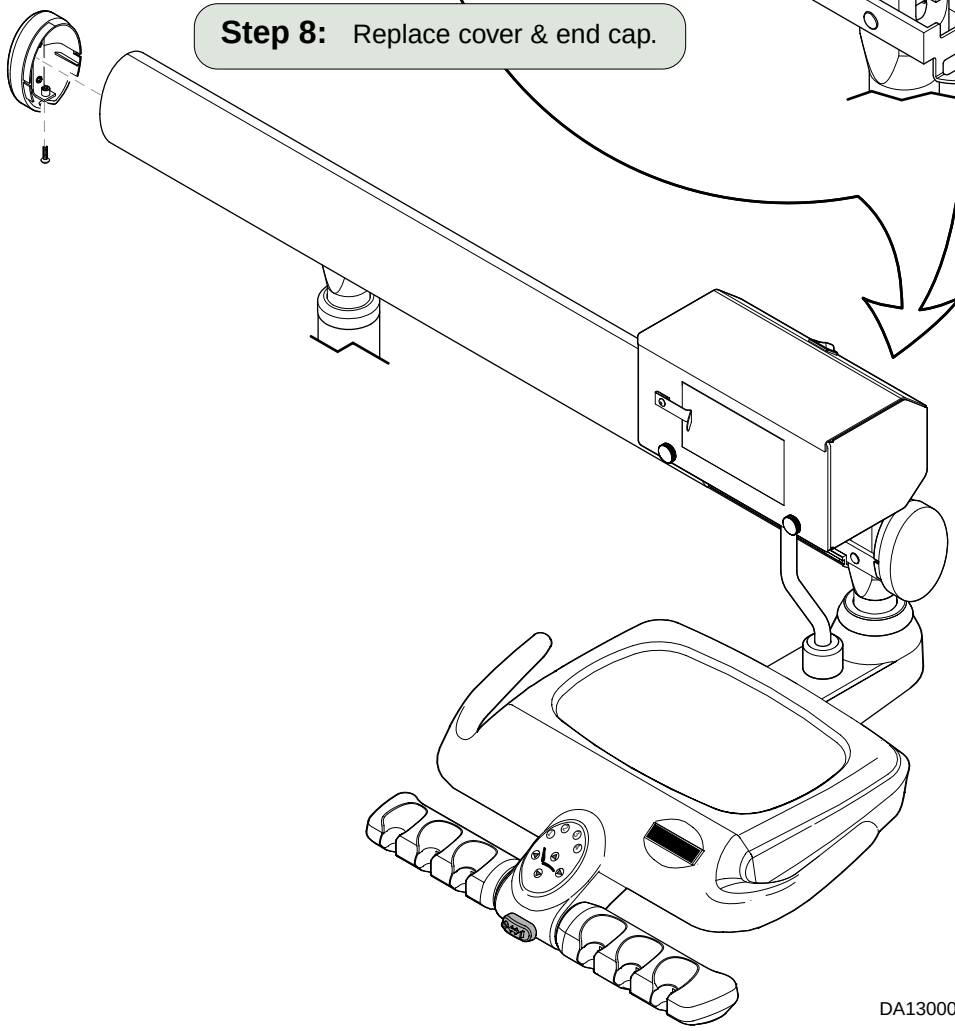

DA130001i

Midmark Corporation
60 Vista Drive
P.O. Box 286
Versailles, OH 45380-0286
937-526-3662
Fax 937-526-5542
www.midmark.com

MIDMARK®
Because we care.

© Midmark Corporation 2003